


HONEYWELL 2000 SERIES – HOW TO FIT A SINGLE-USE MASK?

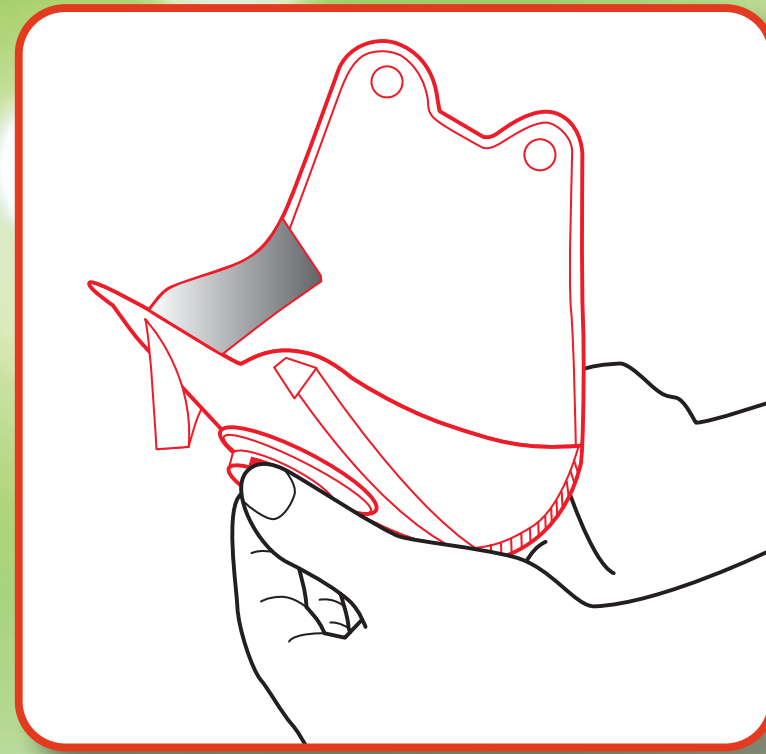

1

- Open the respirator by pushing slightly on both sides




2

- Place the mask under the chin, the nose-bridge upward and outside
- Place the lower headband around the neck, below the ears
- Holding the mask against the face with one hand, place the top headband above the ears, around the crown of the head



3

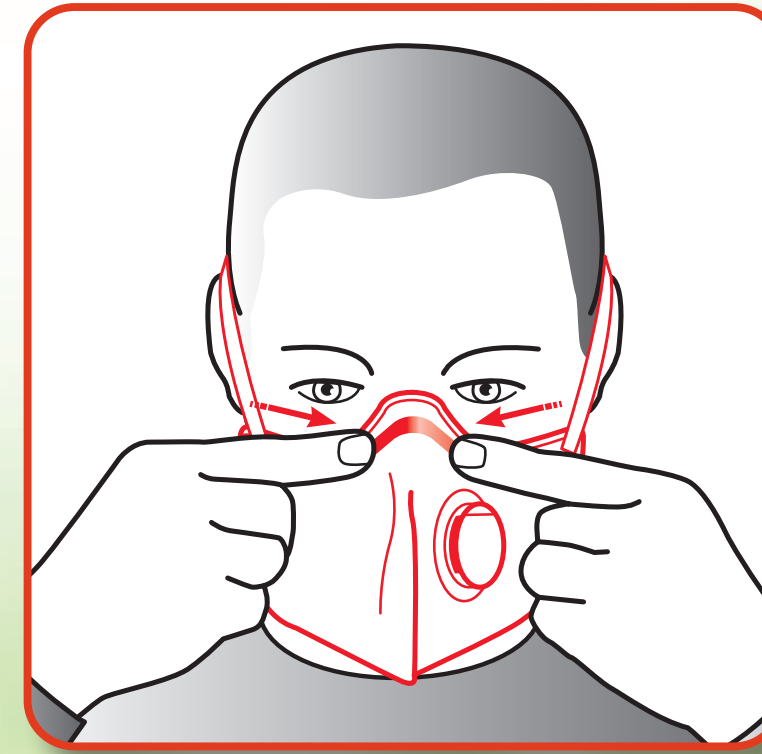


4

- Mould the nose area to the shape of the face by pinching the nose-bridge from the top to the bottom




5

- Check for leak-tightness as follows :
- place both hands over the mask and – exhale sharply for a mask without exhalation valve – inhale deeply for a mask with exhalation valve
 - if you feel air leaks around the edges, readjust the mask by tightening the nose-bridge and/or increasing tension of the headbands (by tying a knot)
 - repeat the procedure until satisfactory face-fit has been achieved

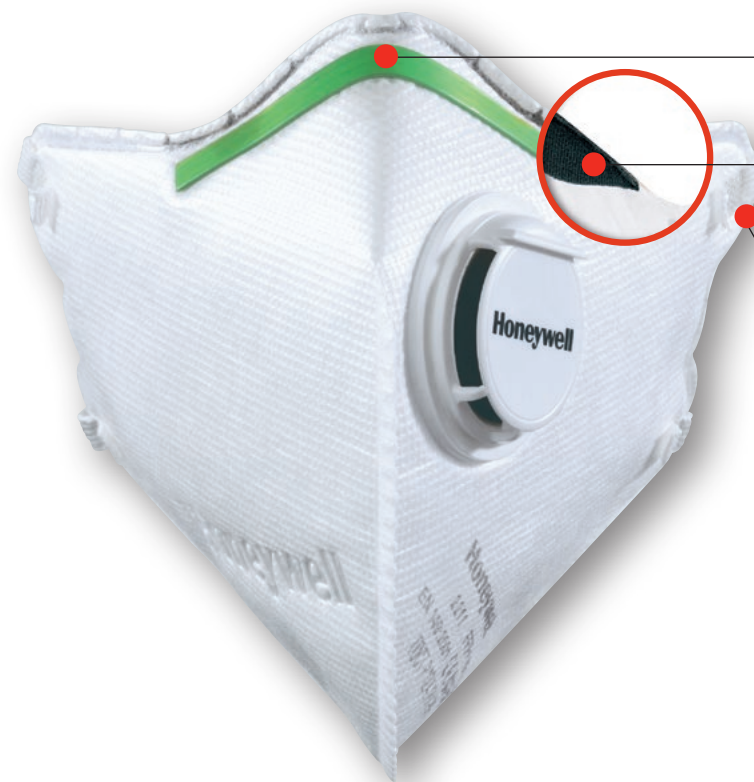

- + Fluid-resistant outer shell offering protection from liquid splashes
- + Preformed and coloured nosebridge to perfectly adjust the mask and to instantly identify its classification within the standard
- + Ultra-soft and hypoallergenic Willtech™ nose seal with absorptive properties for exceptional comfort and fit
- + No Latex, no Silicone, no PVC. No restriction with regard to applications and allergies. Environmentally friendly
- + Welded strap avoiding irritation at the fastening point
- + Packed in an individual sealed bag providing easy transportation and storage and to prevent contamination before use

- + Each mask meets the requirements of:
 - > EN 149: 2001 + A1: 2009 standard
 - > Dolomite test

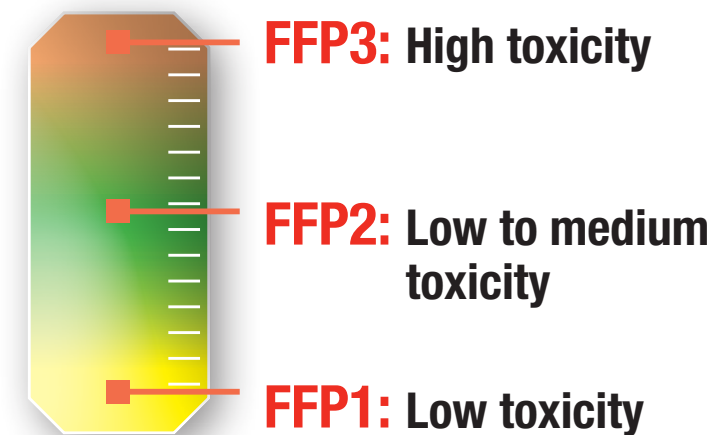

- ! WARNINGS:**
- A beard may reduce the effectiveness of single-use masks
 - The mask must be discarded after a single use (one shift maximum)
 - A well fitted single-use mask guarantees efficient protection